

Hypervolt 2

EN Operating Instructions ZH 使用说明书

EN



TO REDUCE RISKS OF ELECTRIC SHOCK, FIRE, AND PERSONAL INJURY, OR PROPERTY DAMAGE, THIS DEVICE MUST BE USED IN ACCORDANCE WITH THE FOLLOWING WARNINGS, CAUTIONS, AND SAFETY INSTRUCTIONS.

IMPORTANT SAFETY INSTRUCTIONS - ORIGINAL INSTRUCTIONS

Read all instructions before using the Hypervolt 2.

DANGER

To reduce the risk of electric shock:

- Always unplug this device from the electrical outlet immediately after using and before cleaning.
- Do not reach for a device that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store device where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- A device should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- This device can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Use this device only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this device if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has gotten wet. Return the device to a service center for examination and repair.
- Do not carry this device by supply cord or use cord as a handle.
- Keep the cord away from heated surfaces.
- Never operate the device with the air openings blocked. Keep the air openings free of lint, hair, or any substance which may impair the flow of air.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) devices are being used or where oxygen is being administered.

- Never operate on a soft surface such as a bed or couch where the air openings may be blocked.
- Do not use device in close proximity to loose clothing or jewelry.
- Keep long hair away from device while in use.
- Cleaning and user maintenance shall not be done by children without supervision.
- Do not remove screws or attempt to disassemble.
- Do not operate continuously for more than one hour. After one hour use, allow device to rest for 30 minutes before re-using.
- Unplug the device after charging and prior to use.
- Use device only according to Operating Instructions.
- When using the Hypervolt 2 use only on dry, clean surfaces of the body by lightly pressing and moving across the body for approximately sixty(60) seconds per region. The Hypervolt 2 should only be used on soft tissue areas of the body and should not be used on any hard or bony areas of the body, including the head. Please immediately stop use of the Hypervolt 2 upon experiencing any pain or discomfort, apart from light muscle soreness. Bruising can occur from use of the Hypervolt 2, regardless of the pressure setting, and if bruising does occur you should not use the Hypervolt 2 on the bruised area until the bruise is fully healed. Use of the Hypervolt 2 should also be avoided on all bruises, contusions, rashes or irritated or injured areas of the skin until they are fully healed. When using the Hypervolt 2 be sure to keep fingers, toes, hair, and other body parts away from the back of the attachment head to avoid pinching or hair entanglement.

The Hypervolt 2 should only be charged with the double insulated, 18VDC Hyperice charger (model number MX24Z2-1801000) that was supplied with the device. Do not charge the Hypervolt 2 overnight or leave the Hypervolt 2 unattended when charging or in use.

Please do not use the Hypervolt 2, or any percussion device without first obtaining approval from your physician if any of the following apply:

- Pregnancy, diabetes with complications such as neuropathy or retinal damage, wear of pacemakers, recent surgery or injury, epilepsy or migraines, herniated disks, spondylolisthesis, spondylolysis, or spondylosis, recent joint replacements or IUD, metal pins or plates or any concerns about your physical health. Frail individuals and children should be accompanied by an adult when using any percussion or vibration device. These contraindications do not mean that you are not able to use a percussion or vibration device but we advise that before doing so you consult your physician. Ongoing research is being done on the effects of percussion for specific medical disorders that may result in the shortening of the list of contraindications as shown above.

The Hypervolt 2 contains a battery which must be complied with safely at an appropriate e-waste disposal or recycling facility.

CAUTION

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 100° C or incinerate. Dispose of used battery promptly. Keep away from children. Do not disassemble and do not dispose of in fire.

SAVE THESE INSTRUCTIONS

The Hypervolt 2 is a handheld percussion device that delivers targeted pulses of pressure to care for muscles, relieve tension, accelerate warmup and recovery, and help maintain flexibility and range of motion.

Operating

Turn your Hypervolt 2 ON by pressing the power/speed setting button for three seconds. Once your device is powered ON the battery level indicator (LED band) at the base of the handle will illuminate. Press the power/speed setting button again to select speed one. Your Hypervolt 2 is now ready for use. Change speeds (1-3) by pressing the power/speed setting button once per speed. The lights will indicate the current speed.

Changing head attachments

Only change attachments after speed setting is turned to off and head attachment stopped moving. To change head attachments, pull the existing head attachment straight out to remove and insert the desired head directly into the opening while pushing firmly. For the Fork head attachment align the tab on the fork with the groove on the opening and push firmly.

Charging


Fully charge battery for up to four hours before first use. To charge, connect the DC end of the supplied 18V charger to the charging port on the bottom of the handle and plug the charger into a wall outlet. The LED light band will pulsate to show battery level and indicate active charging. The LED light band colors correspond to the charge level ranging from red (low) to green (fully charged). Full charge is indicated when the LED band remains green and fully illuminated. Battery may be recharged at any time and at any battery level. It is not recommended to fully deplete the battery to the red LED level. The average runtime is 2+ hours depending on speed level and pressure applied during use.

Cleaning and storage

Make sure the power is OFF and the battery charger is not attached. Use a damp, clean, cloth and gently wipe your Hypervolt 2. Store in a clean, cool, dry place, out of direct sunlight, when not in use.

Connecting to the Hyperice App

To connect your device to the Hyperice App via Bluetooth® make sure that your device is turned on, Bluetooth® is turned on in your phone, and your device is within close proximity. Select a routine within the Hyperice App and if prompted tap "Scan for Devices." Select your device when it pops up on the screen. HyperSmart™ will automatically start your device and adjust the speed and intensity as you follow along with the routine.

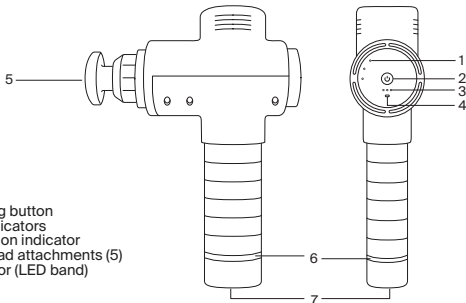

Specifications

1. Speed indicators (3)
2. Power/speed setting button
3. Pressure sensor indicators
4. Bluetooth® connection indicator
5. Interchangeable head attachments (5)
6. Battery level indicator (LED band)
7. Charging port

AC-DC Charger: 110-240V - 50/60Hz 0.7A - 18.0V1.0A 18.0 W
Rechargeable lithium ion battery 4100mAh
Frequency: Level 1 - 1800/30 Hz, Level 2 - 2400/40 Hz, Level 3 - 3000/53 Hz
Weight: 1.8 lbs/0.82 kg
Designed in USA. Assembled in China.

WARRANTY

If within one year from the date of purchase, this device fails due to a defect in material or workmanship, Hyperice, Inc. will repair or replace the device, or necessary components, free of charge.

This warranty excludes:

- (a) damage caused by accident, abuse, mishandling, or transport;
- (b) devices subjected to unauthorized repair;
- (c) devices not used in accordance with Hyperice care instructions;
- (d) damage exceeding the cost of the device;
- (e) deterioration of the delivered device resulting from abnormal storage and/or safeguarding conditions on the client's premises, and
- (f) failure to provide the dated proof of purchase.

Some states and countries do not allow a limitation of damages, so the foregoing limitation may not apply to you. This warranty guarantees specific legal rights, and but other rights may vary from country to country and from state to state. This warranty service is available through the operating policies and procedures of Hyperice, Inc., and all Hyperice international distributors. If you are a client, please contact the appropriate Hyperice business entity, dealer, or retailer, from whom you directly purchased the device for warranty and return authorization procedures. This warranty is initiated and executed by Hyperice, Inc.

ZH



为了降低触电、火灾、人身伤害或财产损失的风险，必须按照以下警告、注意事项和安全说明使用本仪器。

重要安全说明 - 原始说明

使用 Hypervolt 2 之前，请阅读本说明书。

危险

为了降低触电的风险：

- 使用后和清洁前，请务必立即从电源插座中拔下本仪器的电源插头。
- 切勿触碰掉入水中的仪器。立即拔下电源插头。
- 请勿在洗澡或淋浴时使用。
- 请勿将仪器放置或存放在可能掉入或被拉入浴缸或水槽中的地方。请勿将仪器放入或令其跌入水或其他液体中。

警告

为了降低烧伤、火灾、触电或人身伤害的风险：

- 电源插头插在插座上时，切勿让仪器处于无人看管的状态。仪器不使用时，以及安装或取下零部件之前，请从插座中拔下电源插头。
- 请勿在毯子或枕头下操作。可能会发生过度加热，并导致火灾、触电或人身伤害。
- 本仪器可供 8 岁及以上的儿童，身体、感官或心智能力欠佳者，或者缺乏相关经验和知识的人士使用，前提是他们了解相关危害，并且在使用本仪器时有人就仪器安全使用从旁监督或指导。
- 仅将本仪器用于本手册中所述的预期用途。请勿使用制造商不推荐的附件。
- 如果本仪器的电源线或插头损坏，或者本仪器无法正常工作、跌落过或已损坏或者已弄湿，请勿操作本仪器。应将本仪器送回服务中心进行检查和维修。
- 请勿使用电源线或将电源线作为手柄携带本仪器。
- 使电源线远离加热表面。
- 请勿在通风孔堵塞的情况下操作本仪器。使通风孔处无棉绒、头发或任何可能阻碍空气流通的物质。
- 切勿使任何物体掉入或将物体插入仪器的任何开口中。
- 请勿在室外使用。
- 请勿在使用气溶胶（喷雾）仪器或使用氧气的地方操作。
- 切勿在可能堵塞通风孔的柔软表面（例如，床或沙发）上操作。
- 请勿在宽松衣物或珠宝附近使用本仪器。
- 使用时，请使长头发远离本仪器。
- 在无监督的情况下，儿童不得进行清洁和用户维护操作。
- 请勿取下螺钉或尝试拆卸。
- 请勿让连续操作时间超过一小时。使用一小时后，让仪器休息 30 分钟，然后再重新使用。
- 充电后或使用前，请拔下仪器的电源插头。

- 请仅根据使用说明书来使用本仪器。
- 使用 Hypervolt 2 时，只能在干燥、清洁的身体表面使用，方法是轻轻按压并在身体上移动，每个部位停留大约六十 (60) 秒。Hypervolt 2 只能用于身体的软组织区域，不能用于身体的任何坚硬或骨质区域，包括头部。除了轻度肌肉酸痛之外，如果您遇到任何其他疼痛或不适，请立即停止使用 Hypervolt 2。无论压力设置如何，使用 Hypervolt 2 都可能导致擦伤。如果确实发生了擦伤，则在擦伤完全康复之前，不应在擦伤区域使用 Hypervolt 2。也应避免在皮肤的所有擦伤、挫伤、皮疹、刺激或受伤部位使用 Hypervolt 2，直到完全康复为止。使用 Hypervolt 2 时，请确保手指、脚趾、头发和其他身体部位远离附件头背面，以避免夹伤或缠绕头发。

Hypervolt 2 只能使用仪器随附的双重绝缘 18VDC Hyperice 充电器 (型号 MX24Z2-1801000) 充电。在充电或使用时，请勿让 Hypervolt 2 通宵充电或让 Hypervolt 2 无人看管。

对于以下任何情况，事先未经医生许可，请勿使用 Hypervolt 2 或任何冲击仪器：

- 妊娠、糖尿病伴神经病变或视网膜损伤等并发症、装有起搏器、近期手术或受伤、癫痫或偏头痛、椎间盘突出、脊椎前移、脊椎滑脱、颈椎病、近期关节置换或置入 IUD (宫内节育器)、植入金属针或金属板或有任何其他健康问题。使用任何冲击或震动仪器时，体弱人士和儿童应由成人陪同。这些禁忌并不意味着您不能使用冲击或震动仪器，但是我们建议您在使用之前咨询您的医生。目前，有关打击乐对某些疾病影响的研究正在进行中，这些研究可能使缩短上述禁忌清单成为可能。

Hypervolt 2 配有一节电池，该电池必须在相应的电子废弃物处理或回收机构进行安全处置。

注意事项

如果处理不当，本仪器中使用的电池可能引发火灾或导致化学灼伤。请勿将电池加热至 100°C 以上，或者拆解或焚烧电池。请立即处置废旧电池。请让电池远离儿童。请勿拆卸电池，亦勿将电池扔入火中处置。

请妥善保管本说明书

Hypervolt 2 是一种手持式打击乐器，可提供有针对性的压力脉冲，以呵护肌肉，缓解张力，加快预热和恢复速度，并有助于保持灵活性和运动范围。

操作方法

按住电源/速度设置按钮三秒钟，打开 Hypervolt 2。仪器接通电源后，手柄底座上的电池电量指示器 (LED 带灯) 将亮起。再次按下电源/速度设置按钮以选择速度 1。Hypervolt 2 现已准备就绪，可以使用了。变更速度 (1-3)：每按一次电源/速度设置按钮，速度就会调整。指示灯会指示当前速度。

更换按摩头附件

只有在速度设置为关闭且按摩头附件停止移动后，方可更换附件。如果要更换按摩头附件，请直接拔出当前使用的按摩头附件，然后将所需按摩头直接插入开口中，同时用力推入。对于叉头附件，使叉上的卡舌与开口上的凹槽对齐，然后用用力推入。

充电


首次使用之前，至多充电四个小时，将电充满。如果要充电，请将随附的 18V 充电器的直流端与手柄底部的充电端口连接，然后将充电器插入壁装电源插座中。LED 带灯闪烁，显示电池电量，表示正在充电。LED 带灯的颜色与充电等级相对应，颜色从红色 (低电量) 变化至绿色 (已充满电)。LED 带灯常绿且完全常亮时，表示电已充满。电池可以在任何时间、任何电量下进行充电。建议避免将电池电量完全耗尽，达到红色 LED 水平。平均续航时间为 2 小时以上，具体取决于使用期间的速度水平和施加的压力。

清洁和存放

确保电源已关闭且电池充电器未连接。使用略蘸湿的干净布料轻擦拭 Hypervolt 2。不使用时，请将其存放在干净、阴凉、干燥且无阳光直射的地方。

连接 HYPERICE 应用程序

如果要通过 Bluetooth® 将仪器与 Hyperice 应用程序连接,请确保仪器已打开,手机上的 Bluetooth® 也已打开,并且仪器就在附近。然后,在 Hyperice 应用程序中选择相应例程,而后轻触“Scan for Devices”(扫描设备)(如有提示)。接着,在手机屏幕上弹出仪器名称时,选择您的仪器。HyperSmart™ 会自动启动您的仪器,并在您根据例程操作时调整相应速度和强度。

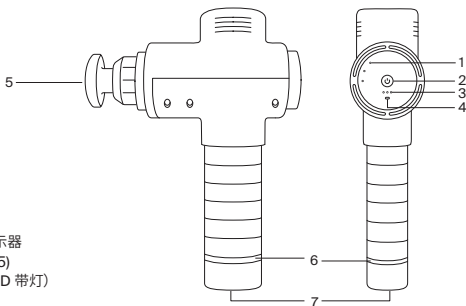

规格

1. 速度指示器 (3)
2. 电源/速度设置按钮
3. 压力传感器指示器
4. Bluetooth® 连接指示器
5. 可互换按摩头附件 (5)
6. 电池电量指示器 (LED 带灯)
7. 充电端口

交流-直流充电器:110-240V - 50/60Hz 0.7A - 18.0V1.0A 18.0 W

4100mAh 可充电锂电池

频率:1 级 - 1800/30 Hz, 2 级 - 2400/40 Hz, 3 级 - 3000/53 Hz

重量:1.8 lbs/0.82 kg

美国设计。中国装配。

保修

如果自购买之日起一年内,本仪器因材料或工艺缺陷而出现故障,Hyperice, Inc. 将免费维修或更换本仪器或其必要组件。

以下情况不属于本仪器的保修范围:

- (a) 损坏是由于事故、滥用、误操作或运输引起的;
 - (b) 仪器经过未经授权的维修;
 - (c) 未按照 Hyperice 保养说明书来使用仪器;
 - (d) 损坏处的修复费用超过仪器的成本;
 - (e) 所交付的仪器因客户相应处所内的存放和/或防护条件异常而劣化,以及
- (f) 未能提供标明日期的购买证明。

某些州和国家/地区不允许对损坏加以限制,因此上述限制可能对您并不适用。本保修服务保障特定合法权利,但其他权利可能因国家/地区和州而异。本保修服务可通过 Hyperice, Inc. 以及所有 Hyperice 国际分销商制定的操作政策和程序获取。如果您是我司客户,请联系您直接向其购买仪器的相应 Hyperice 营业单位、经销商或零售商,了解保修和退货授权程序。本保修服务由 Hyperice, Inc. 发起并执行。

hyperice.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Hyperice, Inc., 525 Technology Drive, Suite 100, Irvine, California 92618 USA

Copyright 2021 © Hyperice, Inc. All rights reserved.

170-00051 Rev 1