

Hypervolt 2 Pro

EN Operating Instructions ZH-TW 繁體中文 操作說明

EN



TO REDUCE RISKS OF ELECTRIC SHOCK, FIRE, AND PERSONAL INJURY, OR PROPERTY DAMAGE, THIS DEVICE MUST BE USED IN ACCORDANCE WITH THE FOLLOWING WARNINGS, CAUTIONS, AND SAFETY INSTRUCTIONS.

IMPORTANT SAFETY INSTRUCTIONS - ORIGINAL INSTRUCTIONS

Read all instructions before using the Hypervolt 2 Pro.

DANGER

To reduce the risk of electric shock:

- Always unplug this device from the electrical outlet immediately after using and before cleaning.
- Do not reach for a device that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store device where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- A device should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- This device can be used by children aged from 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Use this device only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this device if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has gotten wet. Return the device to a service center for examination and repair.
- Do not carry this device by supply cord or use cord as a handle.
- Keep the cord away from heated surfaces.
- Never operate the device with the air openings blocked. Keep the air openings free of lint, hair, or any substance which may impair the flow of air.
- Never drop or insert any object into any opening.

- Do not use outdoors.
- Do not operate where aerosol (spray) devices are being used or where oxygen is being administered.
- Never operate on a soft surface such as a bed or couch where the air openings may be blocked.
- Do not use device in close proximity to loose clothing or jewelry.
- Keep long hair away from device while in use.
- Cleaning and user maintenance shall not be done by children without supervision.
- Do not remove screws or attempt to disassemble.
- Do not operate continuously for more than one hour. After one hour use, allow device to rest for 30 minutes before re-using.
- Unplug the device after charging and prior to use.
- Use device only according to Operating Instructions.
- When using the Hypervolt 2 Pro use only on dry, clean surfaces of the body by lightly pressing and moving across the body for approximately sixty(60) seconds per region. The Hypervolt 2 Pro should only be used on soft tissue areas of the body and should not be used on any hard or bony areas of the body, including the head. Please immediately stop use of the Hypervolt 2 Pro upon experiencing any pain or discomfort, apart from light muscle soreness. Bruising can occur from use of the Hypervolt 2 Pro, regardless of the pressure setting, and if bruising does occur you should not use the Hypervolt 2 Pro on the bruised area until the bruise is fully healed. Use of the Hypervolt 2 Pro should also be avoided on all bruises, contusions, rashes or irritated or injured areas of the skin until they are fully healed. When using the Hypervolt 2 Pro be sure to keep fingers, toes, hair, and other body parts away from the back of the attachment head to avoid pinching or hair entanglement.

The Hypervolt 2 Pro should only be charged with the double insulated, 18VDC Hyperice charger (model number MX24Z2-1801000) that was supplied with the device. Do not charge the Hypervolt 2 Pro overnight or leave the Hypervolt 2 Pro unattended when charging or in use.

Please do not use the Hypervolt 2 Pro, or any percussion device without first obtaining approval from your physician if any of the following apply:

- Pregnancy, diabetes with complications such as neuropathy or retinal damage, wear of pacemakers, recent surgery or injury, epilepsy or migraines, herniated disks, spondylolisthesis, spondylolysis, or spondylosis, recent joint replacements or IUD, metal pins or plates or any concerns about your physical health. Frail individuals and children should be accompanied by an adult when using any percussion or vibration device. These contraindications do not mean that you are not able to use a percussion or vibration device but we advise that before doing so you consult your physician. Ongoing research is being done on the effects of percussion massage for specific medical disorders that may result in the shortening of the list of contraindications as shown above.

The Hypervolt 2 Pro contains a battery which must be complied with safely at an appropriate e-waste disposal or recycling facility.

CAUTION

The battery used in this device may present a risk of fire or chemical burn if mistreated. Do not disassemble, heat above 100° C or incinerate. Dispose of used battery promptly. Keep away from children.

SAVE THESE INSTRUCTIONS

The Hypervolt 2 Pro is a handheld percussion massage device that delivers targeted pulses of pressure to care for muscles, relieve tension, provide a relaxing massage, accelerate warmup and recovery, and help maintain flexibility and range of motion.

OPERATING

Switch your Hypervolt 2 Pro to the ON position at the base of the handle. The LED band on the handle will illuminate indicating the battery level. Turn the digital speed dial clockwise to the desired speed setting indicated by the LED lights illuminating on the face of the control panel. Your Hypervolt 2 Pro is now ready for use. The lowest speed is at the nine o'clock position and the highest speed is at the twelve o'clock position. Turning the dial clockwise will increase the speed. To turn off the percussion, rotate the digital control dial counter clockwise until all five of the LEDs are turned off.

CHANGING HEAD ATTACHMENTS

Only change attachments after speed setting is turned to off and head attachment stopped moving. To change head attachments, pull the existing head attachment straight out to remove and insert the desired head directly into the opening while pushing firmly. For the Fork head attachment align the tab on the fork with the groove on the opening and push firmly.

CHARGING


Fully charge battery for up to four hours before first use with the battery either attached or detached from the device. To charge, connect the DC end of the supplied 18V charger to the charging port on the bottom of the battery/handle and plug the charger into a wall outlet. The LED light band colors correspond to the charge level ranging from red (low) to green (fully charged). Full charge is indicated when the LED band remains green and fully illuminated. Battery may be recharged at any time and at any battery level. It is not recommended to fully deplete the battery to the red LED level. The average runtime is 2+ hours depending on speed level and pressure applied during use. It is recommended to toggle the power switch to OFF while the device is not in use and during storage and travel.

CLEANING AND STORAGE

Make sure the power is OFF and the battery charger is not attached. Use a damp, clean cloth and gently wipe your Hypervolt 2 Pro. Store in a clean, cool, dry place, not in direct sunlight, when not in use.

CONNECTING TO THE HYPERICE APP

To connect your device to the Hyperice App via Bluetooth® make sure that your device is turned on, Bluetooth® is turned on in your phone, and your device is within close proximity. Select a routine within the Hyperice App and if prompted tap "Scan for Devices." Select your device when it pops up on the screen. HyperSmart™ will automatically start your device and adjust the speed and intensity as you follow along with the routine.

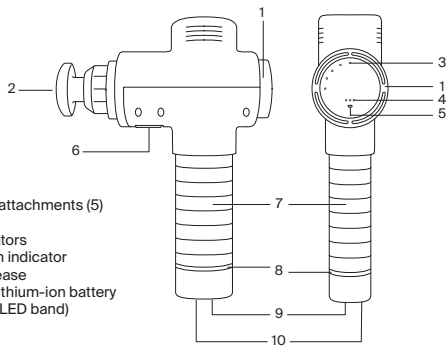

SPECIFICATIONS

1. Digital speed dial
2. Interchangeable head attachments (5)
3. Speed indicators (5)
4. Pressure sensor indicators
5. Bluetooth® connection indicator
6. Removable battery release
7. Handle/rechargeable lithium-ion battery
8. Battery level indicator (LED band)
9. ON/OFF power switch
10. Charging port

AC-DC Charger: 110-240V - 50/60Hz 0.7A - 18.0V1.0A 18.0 W

Rechargeable lithium ion battery 4100mAh

Frequency: Level 1 - 1700/28 Hz, Level 2 - 1900/32 Hz, Level 3 - 2100/35 Hz,

Level 4 - 2400/40 Hz, Level 5 - 2700/45 Hz

Weight: 2.6 lbs/1.18 kg

Designed in USA. Assembled in China.

WARRANTY

If within one year from the date of purchase, this device fails due to a defect in material or workmanship, Hyperice, Inc. will repair or replace the device, or necessary components, free of charge.

This warranty excludes:

- (a) damage caused by accident, abuse, mishandling, or transport;
- (b) devices subjected to unauthorized repair;
- (c) devices not used in accordance with Hyperice care instructions;
- (d) damage exceeding the cost of the device;
- (e) deterioration of the delivered device resulting from abnormal storage and/or safeguarding conditions on the client's premises, and
- (f) failure to provide the dated proof of purchase.

Some states and countries do not allow a limitation of damages, so the foregoing limitation may not apply to you. This warranty guarantees specific legal rights, and but other rights may vary from country to country and from state to state. This warranty service is available through the operating policies and procedures of Hyperice, Inc., and all Hyperice international distributors. If you are a client, please contact the appropriate Hyperice business entity, dealer, or retailer, from whom you directly purchased the device for warranty and return authorization procedures. This warranty is initiated and executed by Hyperice, Inc.

ZH-TW



為降低觸電、起火與人身傷害或財產損害的風險，使用本裝置時必須遵照下列警告、注意事項與安全說明。

重要安全說明 - 原版說明

使用 Hypervolt 2 Pro 之前，請先閱讀所有說明。

危險

若要降低觸電的風險：

- 請務必立即在使用完畢後，以及進行清潔之前，將本裝置的插頭從電源插座拔除。
- 請勿撿取掉落水中的裝置，應立即拔除插頭。
- 請勿在泡澡或淋浴時使用。
- 請勿將裝置放在或收納在可能會掉入或被拉進浴缸或臉盆的地方。請勿將裝置放入或令其落入水或其他液體中。

警告

為降低灼傷、起火、觸電或人身傷害的風險：

- 裝置插電時，切勿將其留置在無人看管的情況下。不使用時，以及裝上或取下零件之前，請將插頭從插座上拔除。
- 請勿在毯子或枕頭下操作。可能會發生過熱的情況，並造成起火、觸電或人身傷害。
- 本裝置可供 8 歲以上兒童和身體、官能或心智能力退化者，或使用經驗與知識缺乏者使用，但需要有人在旁監督或適當說明如何安全使用本產品，並瞭解可能涉及的危險。
- 請僅將本裝置用於本手冊所述之用途。請勿使用非製造商建議的配件。
- 如果裝置的電線或插頭受損、無法正常運作、曾掉落或損壞，或是已潮濕，切勿操作本裝置。請將裝置送回服務中心進行檢查和維修。
- 請勿透過電源線拿取本裝置，或將電源線當作握把。
- 請勿讓電線靠近發熱的表面。
- 切勿在通風口阻塞的情況下操作裝置。請勿讓通風口累積棉絮、毛髮或可能阻礙空氣流動的任何物質。
- 切勿讓任何物體落入或放入任何開口中。
- 請勿在室外使用。
- 請勿在使用氣霧（噴霧）裝置或正在供給氧氣的地方操作。
- 請勿在床面或沙發等可能阻塞通風口的柔軟表面上操作。
- 請勿在靠近寬鬆衣物或珠寶的地方使用裝置。
- 使用時，請讓長髮遠離裝置。
- 若無人在旁監督，不得讓兒童進行清潔與使用者維護。
- 請勿拆除螺絲或嘗試拆解裝置。
- 請勿連續操作超過一小時。使用一小時後，請讓裝置休息 30 分鐘，然後才再次使用。
- 充電後和使用前，請拔除裝置插頭。

- 請僅根據操作說明使用裝置。
- 只能在乾燥、乾淨的身體表面上使用 Hypervolt 2 Pro，在每個區域上輕輕壓按約六十 (60) 秒並移至身體各處。Hypervolt 2 Pro 只能用於身體的軟組織區域，不應用在包括頭部在內的任何硬質或骨骼區域上。如果感到任何疼痛或不適（輕微肌肉痠痛除外），請立即停止使用 Hypervolt 2 Pro。不論壓力設定為何，使用 Hypervolt 2 Pro 都可能會發生瘀傷。如果發生瘀傷，請勿在傷處使用 Hypervolt 2 Pro，直到瘀傷完全痊癒為止。另外也應避免在皮膚上的所有瘀傷、挫傷、紅疹或刺痛或受傷部位使用 Hypervolt 2 Pro，直到該處完全痊癒為止。使用 Hypervolt 2 Pro 時，請務必讓手指、腳趾、頭髮和其他身體部位遠離接頭後方，以避免夾傷或毛髮纏繞。

Hypervolt 2 Pro 只能使用裝置隨附的雙絕緣 18VDC Hyperice 充電器（型號 MX24Z2-1801000）來充電。請勿讓 Hypervolt 2 Pro 充電一整夜，或在充電或使用時將 Hypervolt 2 Pro 留置在無人看管的情況下。

如果發生下列任何情況，請勿在未經醫生核准的情況下使用 Hypervolt 2 Pro 或任何叩擊裝置：

- 懷孕、糖尿病伴隨神經病變或視網膜損傷等併發症、配戴心律調整器、最近曾受傷或接受手術、有癲癇或偏頭痛、椎間盤突出、脊椎滑脫症、椎弓解離症或脊椎關節退化、近期接受關節置換、裝有宮內節育器、裝有金屬釘或金屬板，或是對於您的身體健康有任何疑慮。身體虛弱者及兒童在使用任何叩擊或震動裝置時，應有成人陪同。這些禁忌症並不代表您無法使用叩擊或震動裝置，但我們建議您在使用前先諮詢醫生。目前正針對叩擊按摩對特定疾病的效果進行研究中，可能會因此縮短上述禁忌症清單。

Hypervolt 2 Pro 裝有一顆電池，必須依照安全規定將其送到適當的電子廢棄物處置或回收設施。

注意事項

若以不當的方式處置本裝置所使用的電池，可能有起火或化學灼傷的風險。請勿拆解、加熱超過 100 °C 或焚化。請立即丟棄使用過的電池。請放在遠離兒童的地方。

請保存本說明

Hypervolt 2 Pro 是手持式叩擊按摩裝置，能針對目標部位提供壓力脈衝，以保護肌肉、解除緊繃狀態、提供放鬆的按摩、加速暖身與恢復，並協助維持靈活度和動作幅度。

操作

將握把底部的開關切換至「開啟」位置，以開啟 Hypervolt 2 Pro。握把上的 LED 燈帶會亮起，表示電池電量。將數位快速調節器順時針旋轉至所需速度設定，控制面板表面上亮起的 LED 燈代表速度設定。您的 Hypervolt 2 Pro 現已準備就緒可供使用。最低速度是在九點鐘位置，最高速度是在十二點鐘位置。順時針轉動調節器可增加速度。若要關閉叩擊模式，請逆時針旋轉數位控制調節器，直到五個 LED 全部關閉為止。

更換接頭附件

請僅在速度設定切換至關閉且接頭附件停止移動後，才可更換附件。若要更換接頭附件，請將現有的接頭附件筆直拉出以取下，並將要使用的接頭直接插入開口中，同時用力推入。若為叉式接頭附件，請將叉式接頭凸出處對齊開口上的凹槽，然後用力推入。

充電

在第一次使用前，無論電池是否連接至裝置，請先將電池充滿，最長四小時。若要充電，請將隨附 18V 充電器的 DC 端連接至電池/握把底部的充電連接埠，並將充電器插入牆上的插座中。LED 燈條會對應到充電電量，顯示紅色（低電量）至綠色（充滿電）。當 LED 燈條保持綠燈並完全亮起時，即表示已充滿電。可隨時在任何電池電量下為電池充電。不建議將電池電量完全耗


盡至紅色 LED 的狀態。視使用期間套用的段速和壓力而定，平均運作時間為 2 小時以上。不使用裝置和裝置存放及攜帶外出期間，建議您將裝置電源開關切換至關閉。

清潔與存放

請確定關閉電源，且未連接電池充電器。使用乾淨的濕布，輕輕擦拭 Hypervolt 2 Pro。不使用時，請存放在乾淨、涼爽、乾燥的地方，避免陽光直射。

連線至 HYPERICE 應用程式

若要透過 Bluetooth® 將裝置連線到 Hyperice 應用程式，請確定您的裝置已開啟、手機已開啟 Bluetooth®，且您的裝置放在附近。在 Hyperice 應用程式中選擇慣用模式，如果出現提示，請點選「Scan for Device」(掃描裝置)。當裝置在畫面中出現時，請選取您的裝置。HyperSmart™ 會自動啟動您的裝置，並在您採用慣用模式時調整速度和強度。

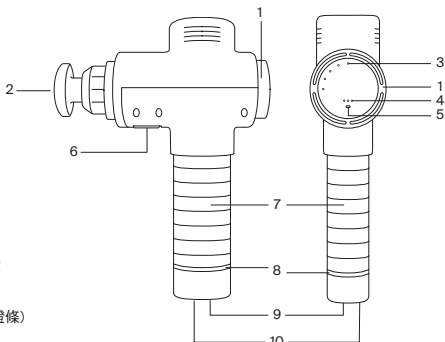

規格

1. 數位快速調節器
2. 可換式接頭附件 (5)
3. 速度指示燈 (5)
4. 壓力感測器指示燈
5. Bluetooth® 連線指示燈
6. 拆卸式電池釋放鈕
7. 握把/充電式鋰離子電池
8. 電池電量指示燈 (LED 燈條)
9. 開啟/關閉電源開關
10. 充電連接埠

AC-DC 充電器：110-240V - 50/60Hz 0.7A - 18.0V1.0A 18.0 W

充電式鋰離子電池 4100mAh

頻率：段速 1 - 1700/28 Hz、段速 2 - 1900/32 Hz、段速 3 - 2100/35 Hz、

段速 4 - 2400/40 Hz、段速 5 - 2700/45 Hz

重量：2.6 磅/1.18 公斤

美國設計。於中國組裝。

保固

如果在購買日起的一年內，本裝置因材質或製作技術瑕疵而故障，Hyperice, Inc. 將免費修理或更換裝置或必要組件。

本保固不包括：

- (a) 因意外、濫用、使用不當或運輸造成的損壞；
- (b) 由未經授權方維修過的裝置；
- (c) 未依照 Hyperice 照護說明使用裝置；
- (d) 超過裝置成本的損害；
- (e) 由於客戶場所的異常儲存及/或安全防護條件，導致所提供裝置的劣化，以及
- (f) 無法提供有標註日期的購買證明。

部分州份和國家/地區不允許損害限制，因此前述限制可能不適用於您。本保固保證您享有特定法律權利，但其他權利可能因國家/地區或州份而有所不同。本保固服務可透過 Hyperice, Inc. 及所有 Hyperice 國際經銷商的操作政策與程序取得。如果您是顧客，請聯絡您直接向其購買裝置的適當 Hyperice 商業實體、經銷商或零售商，以進行保固與退貨授權程序。此保固由 Hyperice, Inc. 發起與執行。

hyperice.com

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Hyperice, Inc., 525 Technology Drive, Suite 100, Irvine, California 92618 USA

Copyright 2021 © Hyperice, Inc. All rights reserved.

170-00134 Rev 1